


# Quick Start - Graphic Button Overview

## MOTORIZED ROLL FILM KEYBOARD CONTROL

The motorized roll film controller provides precision control and position of the microfilm with easy to use on screen controls.

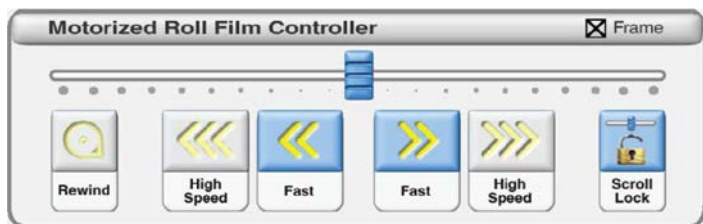

**High Speed Rewind** Pull carrier forward to open the glass. Then, DOUBLE CLICK the Rewind button to rewind your film.

**High Speed** Pull carrier forward to open the glass. Then, CLICK and hold for High Speed Reverse or High Speed Forward.

**Fast** CLICK and hold to Fast Reverse or Fast Forward the film (carrier must be closed).

**Scroll** CLICK, hold, and drag Scroll button for Slow speed control, Reverse or Forward (carrier must be closed).

**Scroll Lock** CLICK the Scroll Lock button, then CLICK and drag the scroll button for the desired speed. The scroll button will remain at that position. CLICK Stop to release.

## KEYBOARD SHORTCUTS:

### MOTORIZED ROLL FILM SHORTCUT

Press and hold the keys for slow film movement and tap the increase/decrease film speed.

Press and hold the + keys or + for fast film movement (speed doubles when the film carrier is pulled all the way forward.)

Press + to rewind film (requires that the film carrier is pulled all the way forward).

## Crop



**Crop** The Crop Box (dotted green box) always appears on the view screen. CLICK inside the Crop Box and drag it to a new location. CLICK and drag on any handle to resize the rectangular shape.

**Custom Crop** CLICK inside the Crop Box and drag it to a new location. CLICK and drag on any handle to resize the rectangular shape. RIGHT CLICK on a corner handle and drag to create an irregular custom shape.

## Custom Crop

